




Drive Analyzer®

DA SmartQuest License Purchase and App Installation Guide


The purpose of this document is to guide users through the DA SmartQuest license purchase and app installation process. The user needs to go through the license purchase process before installing the DA SmartQuest app. You can accomplish this by following the steps below.

## 1. License Purchase


- a. To purchase a DA SmartQuest License, please visit DA Drive Analyzer’s shop page at <https://ulink-da.com/shop/>

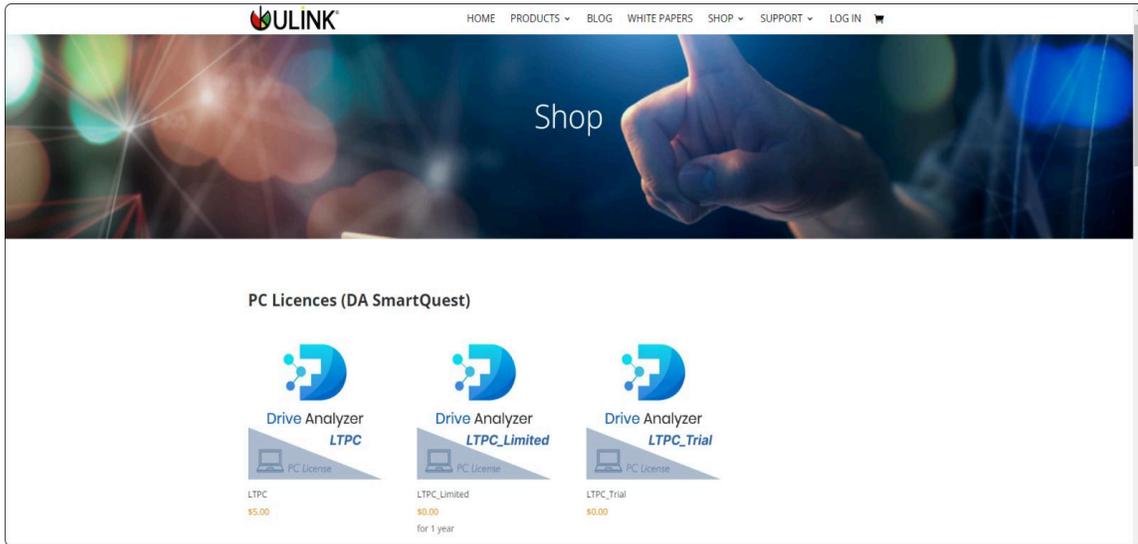

- b. We currently have 3 licenses for DA SmartQuest under the “PC Licenses” section. Please check out the features specific to each license under the “License Comparisons” table at the bottom of the page and then click on the license you wish to obtain.

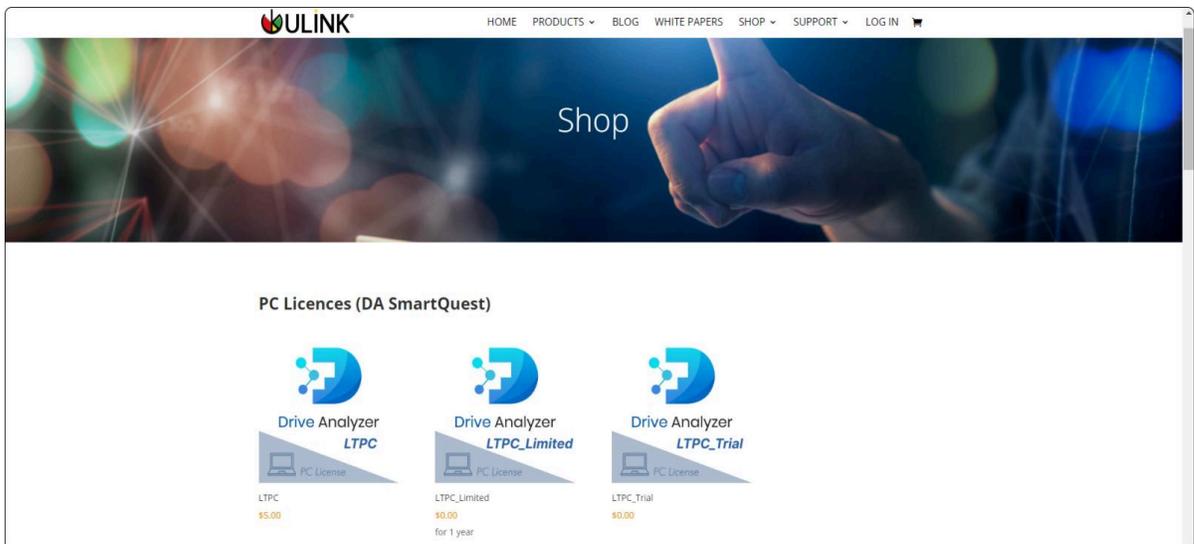

- c. After clicking on a specific license, you will be guided to a product page where you can choose the number of licenses you wish to proceed with. After selecting the number of licenses you would like, click on the “Add to Cart” button.

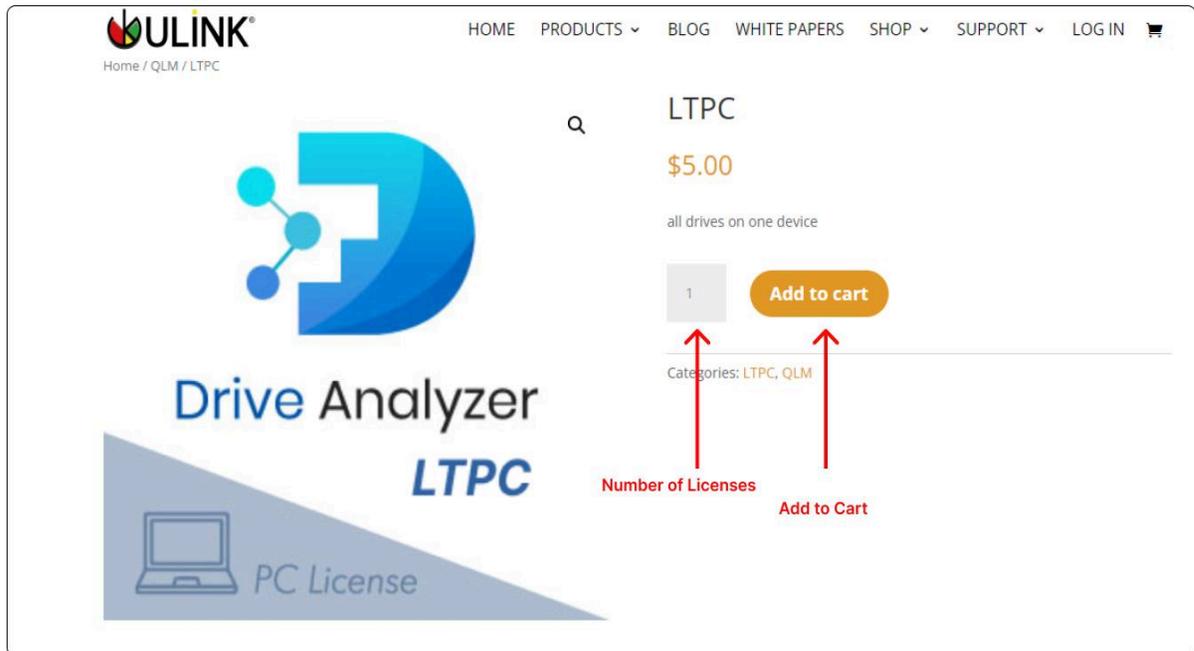

- d. After adding the licenses to the cart, proceed to check out the cart by clicking on the “View Cart” button or “Cart” icon in the top right corner. This will lead you to the cart page, where you can click on the “proceed to checkout” button to purchase the license.

**BULINK**  
Home / QLM / LTPC

HOME PRODUCTS ▾ BLOG WHITE PAPERS SHOP ▾ SUPPORT ▾ LOG IN 

"LTPC" has been added to your cart. [View cart](#)



LTPC  
\$5.00  
all drives on one device

1 [Add to cart](#)

Categories: [LTPC](#), [QLM](#)

# Drive Analyzer

## LTPC



PC License

**BULINK**  
HOME PRODUCTS ▾ BLOG WHITE PAPERS SHOP ▾ SUPPORT ▾ LOG IN 

# Cart

Product	Price	Quantity	Subtotal
 LTPC	\$5.00	1	\$5.00

[Update cart](#)

**Cart totals**

Subtotal	\$5.00
Shipping	Free shipping Shipping to <b>CA</b> <a href="#">Change address</a>
<b>Total</b>	<b>\$5.00</b>

[Proceed to checkout](#)

- e. After clicking on the proceed to checkout button, you will be redirected to the checkout page where you can submit the required information and any applicable payment details to proceed with your order. Please check the checkbox for Terms and conditions before proceeding with placing your order.

Recurring customer? [Click here to login](#)

### Billing details

First name (optional)  Last name (optional)

Company name (optional)

Country / Region (optional)  
United States (US)

Street address (optional)  
House number and street name

Apartment, suite, unit, etc. (optional)

Town / City (optional)

State (optional)  
California

ZIP Code (optional)

Phone (optional)

Email address (optional)

Ship to a different address?

### Additional information

Order notes (optional)  
Notes about your order, e.g. special notes for delivery.

### Your order

Product	Subtotal
LEPC x 3	\$5.00
<b>Subtotal</b>	<b>\$5.00</b>
Shipping	Free shipping
<b>Total</b>	<b>\$5.00</b>

### Card Details

Credit / Debit Card

Secure, 1-click checkout with Link

Card number

Expiration date

Security code

### Terms & Conditions

Your personal data will be used to process your order, support your experience throughout this website, and for other purposes described in our privacy policy.

I have read and agree to the website [terms and conditions](#) \*

**Place Order**

- f. Once an order is placed, you will be directed to the order page where you can find your order details along with a downloadable app installation (.exe) file and license key/s. Upon placement of order, you will also receive two emails - an order received email and an order confirmation email. The order confirmation email contains your order details along with a downloadable app installation file and license key/s. You can download the app installation file from the order page or by clicking on the installation file link in the email.

Downloading the app installation file (.exe) from the order page :

Thank you. Your order has been received.

ORDER NUMBER: 231341    DATE: June 20, 2021    EMAIL: danil@egst.com    TOTAL: \$60.00    PAYMENT METHOD: Credit Card (Stripe)

**Downloads**

Product	Subscription	Download
Pro DA	June 20, 2022	<a href="#">DA_Desktop_Suite_1.0.6_dev.exe</a>

**Order details**

Product	Total
Pro DA × 1 LicenseKey: BNQ60-40600-GHJKM-28P91-311KG-5JDXR-DDWIAB55U	\$60.00
<b>Subtotal:</b>	<b>\$60.00</b>
<b>Payment method:</b>	<b>Credit Card (Stripe)</b>
<b>Total:</b>	<b>\$60.00</b>

[Order again](#)

Downloading the app installation file from the order confirmation email :

Ulink DA sales@ulink-da.com us.hosting-website.io to me

Jun 20, 2021, 10:44 PM (4 days ago)

**Thanks for shopping with us**

Hi Anil,

We have finished processing your order.

**Downloads**



Product	Subscription	Download
Pro DA	June 20, 2022	<a href="#">DA_Desktop_Suite_1.0.6_dev.exe</a>

**[Order #231342] (June 20, 2021)**



Product	Quantity	Price
Pro DA LicenseKey: BNQ60-40600-GHJKM-28P91-311NF-QG888-5CMIYSHS7	1	\$60.00
<b>Subtotal:</b>		<b>\$60.00</b>
<b>Payment method:</b>		<b>Credit Card (Stripe)</b>

## 2. DA SmartQuest Installation


- Upon downloading the app installation file (.exe), double-click on the saved file to start the installation process. The installation process will start. An installation window will appear with an End User License Agreement. Check the "I accept the agreement" box and click on "Next" to continue with the installation.

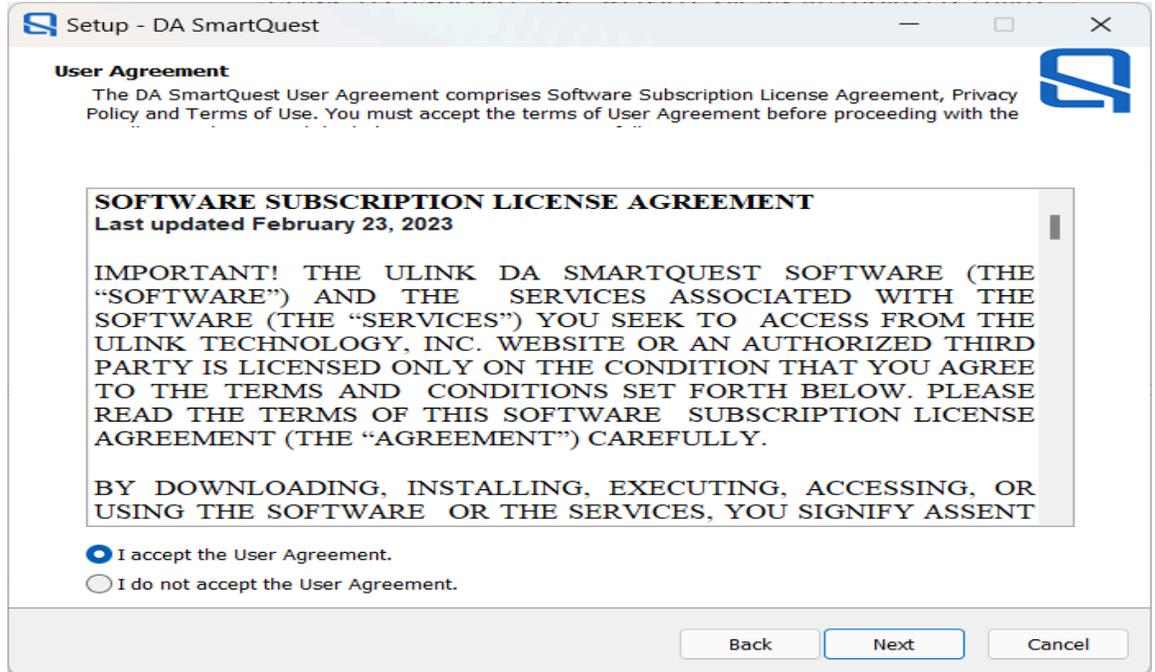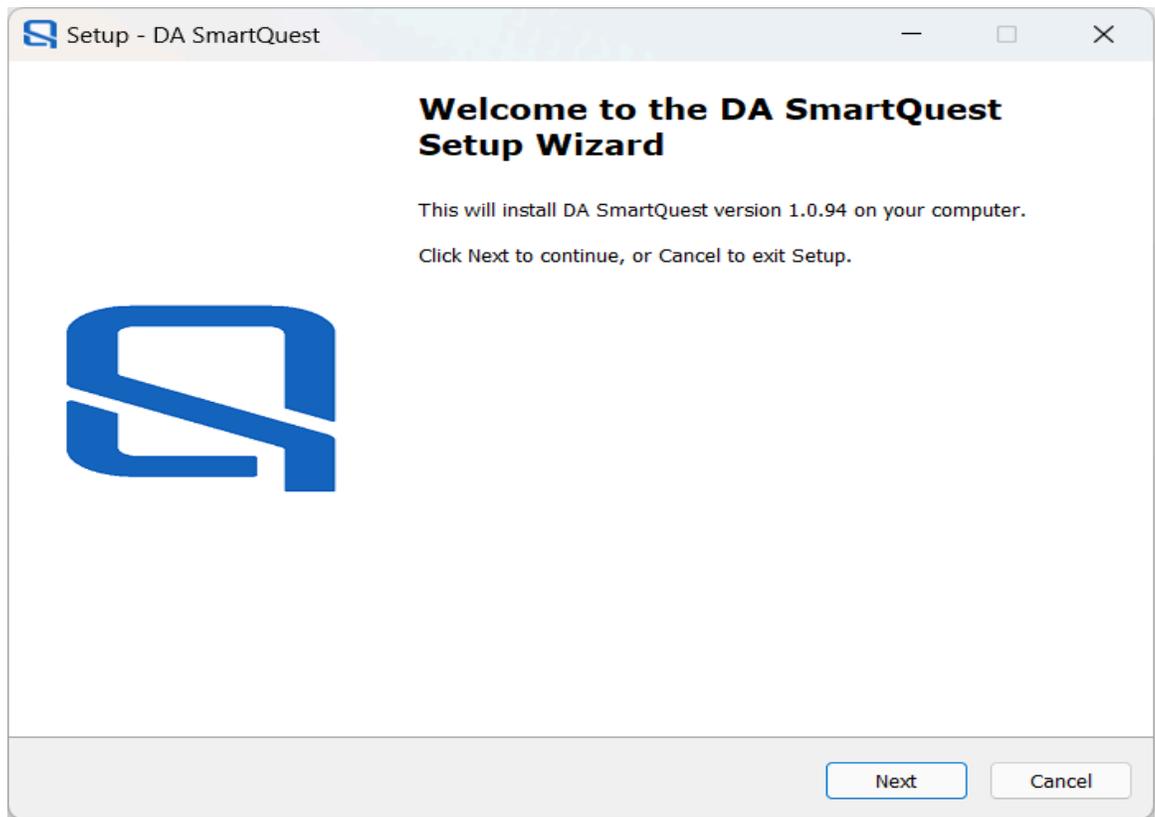

- b. Check the "Create a desktop shortcut" checkbox if the application shortcut is needed and click on "Next" to proceed with the installation. This will initiate the installation.

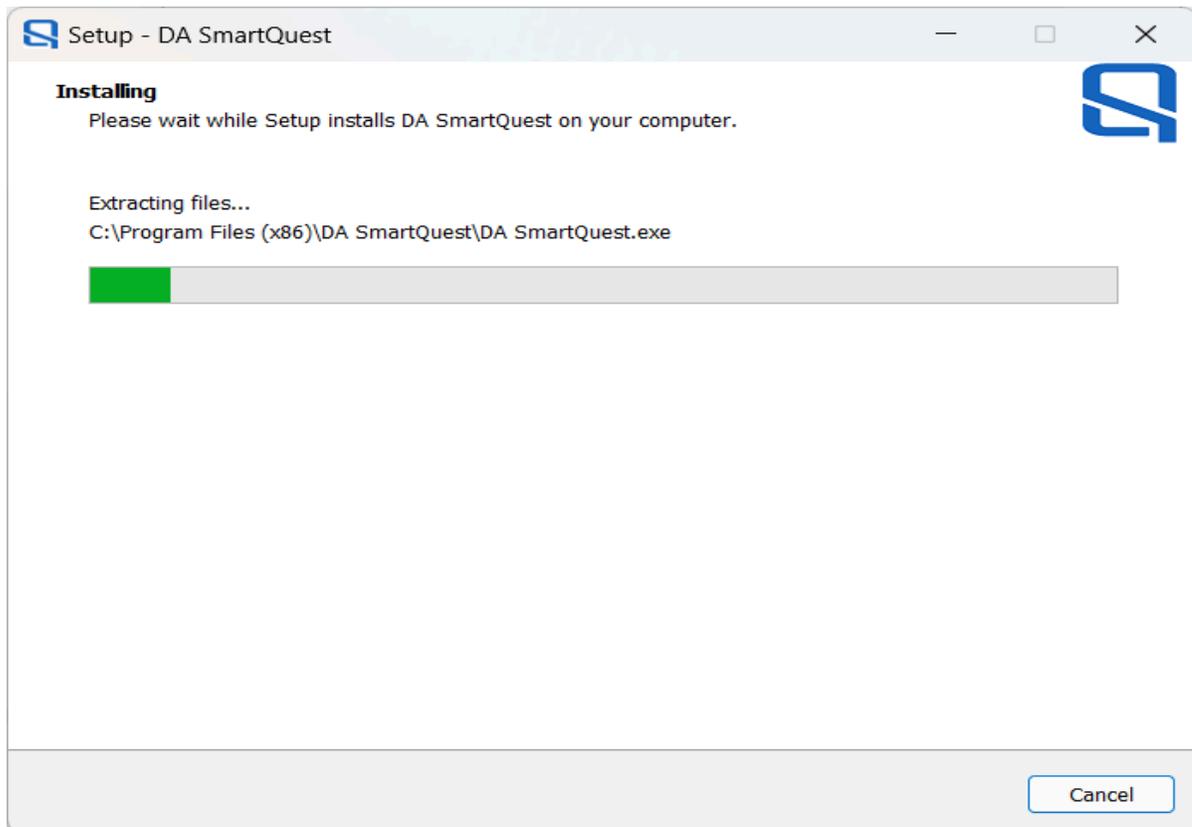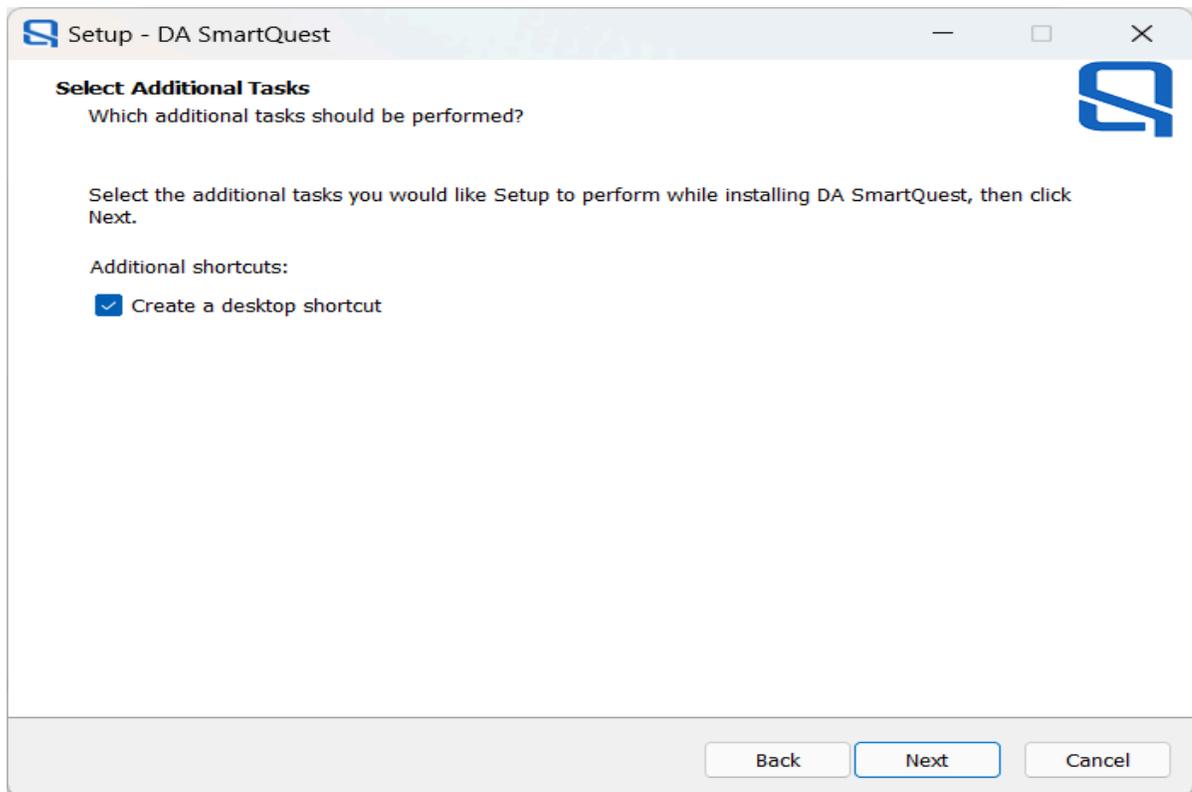


- c. Click on the "Finish" button. This will complete the installation. If "Launch DA SmartQuest" is checked, it will start the DA SmartQuest app.

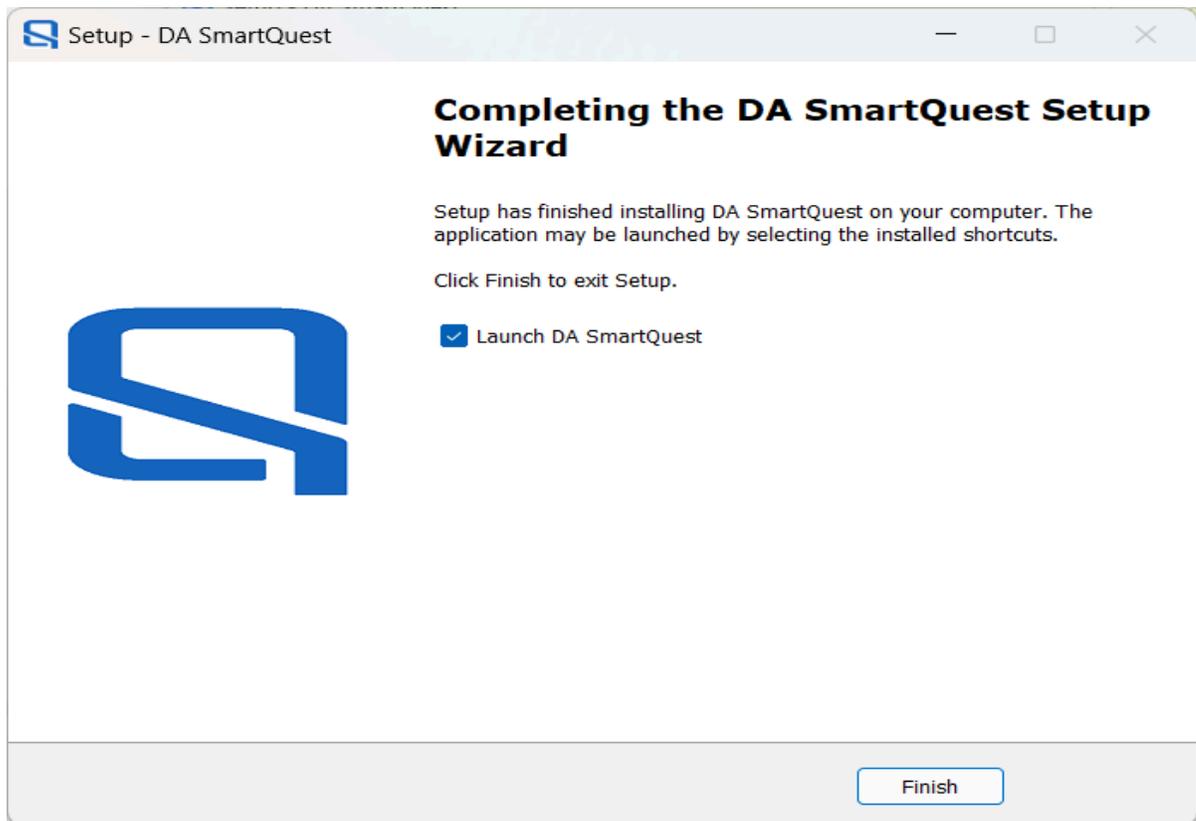


### 3. Application Mode Selection and License Activation

- a. Once the DA SmartQuest app is launched, you will see a screen for Application Mode Selection, where the two modes of the application are presented.
  - i. Cloud: Installing DA SmartQuest app in Cloud Mode allows the application to upload drive health data to DA Drive Analyzer's cloud servers, giving you access to the full set of features -including threshold-based alerts, detailed health metric displays, and more. An internet connection is required. If no internet connection is available, the application will default to Standalone Mode.
  - ii. Standalone: Installing DA SmartQuest in Standalone Mode keeps your drive health data strictly on your local device. AI-based drive health predictions will be generated, but other features will not be available. No internet connection is required.

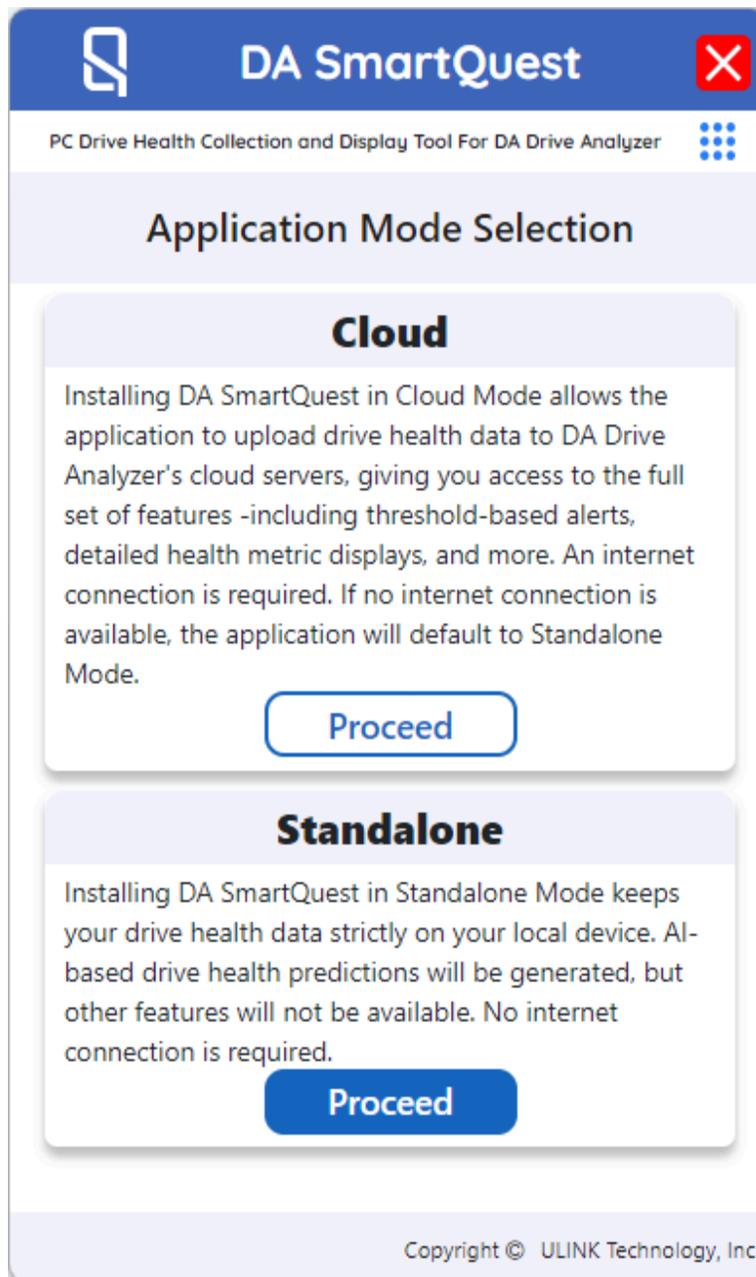

4. **Option 1: Cloud Mode Selection and License Activation**

- a. Click on "Proceed" button on the card for Cloud mode, you will be redirected to the ULINK Account Login page.

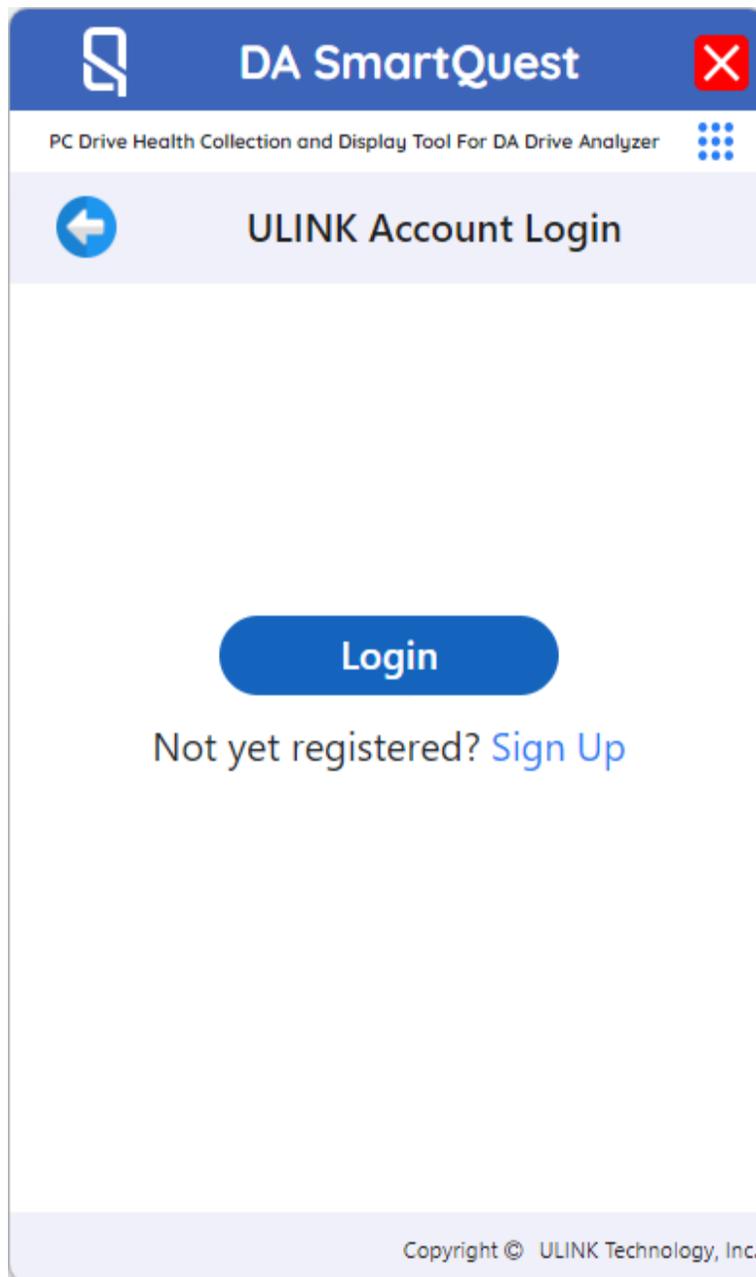

- b. Click on “Login” if you already have an ULINK account otherwise click on “Sign Up” and follow the process to create a new account. Once you click on the “Login” button, you will be redirected to the sign-in page. Enter the required information and click on “Sign In”

DA Account Center - Sign In

# DA Account Center

## Sign In to DA Account

Not registered yet? [Sign Up](#)

Username or Email Address

Password


**Sign in**

[Forgot Password](#)

[Haven't received Activation e-mail?](#)

Powered by **ULINK** DA Drive Analyzer

- c. You will be directed to the “Activate License Key” page, fill in the required information and click on “Activate License”. If you do not have a license key, please proceed to <https://ulink-da.com/shop/> to purchase or obtain a license.

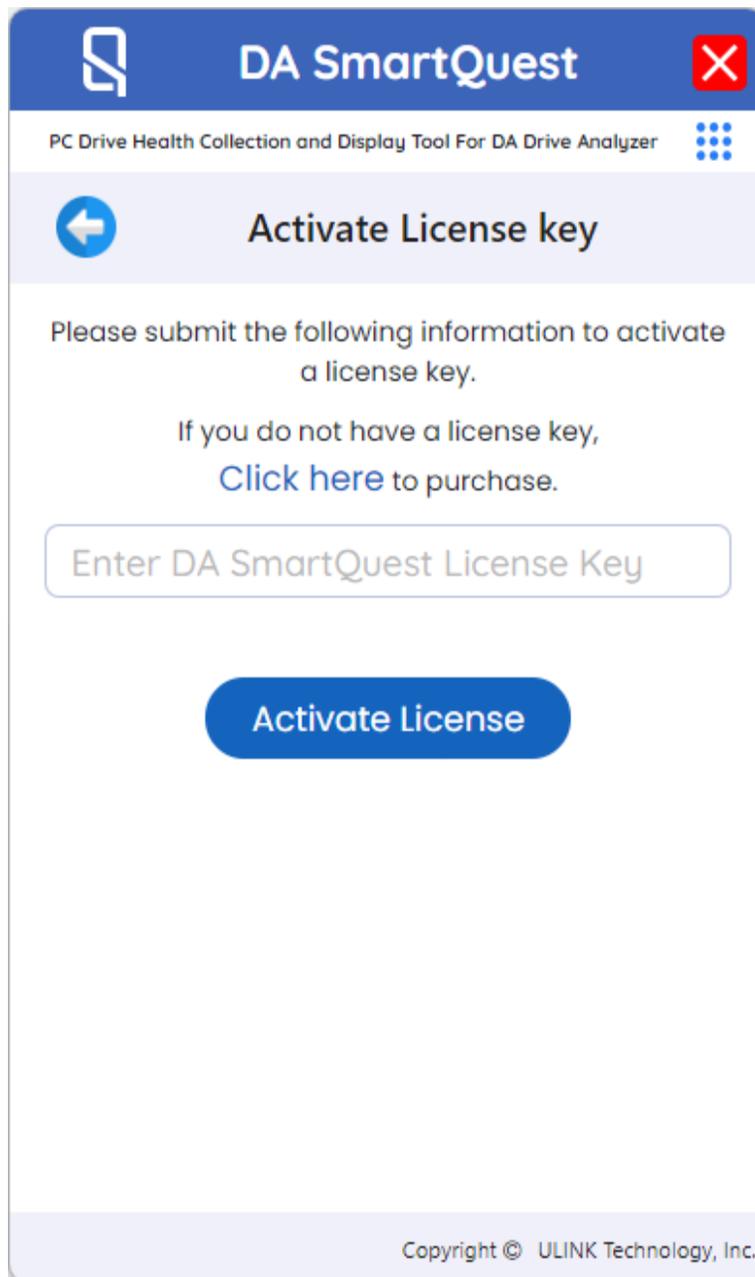

- d. Upon successful activation, your DA SmartQuest Cloud Mode is set. Your drive health predictions generated via an online algorithm, other alerts, and drive health metrics will be available within 24-48 hours after your drive health data has been uploaded and processed. You can access these additional features via DA Portal or DA Monitor. For these features to work smoothly, please ensure that your internet connection is on, and your computer is not in sleep mode.
5. **Option 2: Standalone Mode Selection and License Activation**
- a. Click on the “Proceed” button on the card for Standalone mode.
  - b. You will be redirected to an “Offline License Activation” page. Follow the steps mentioned on the page to activate the license.

DA SmartQuest

PC Drive Health Collection and Display Tool For DA Drive Analyzer

### Offline License Deactivation

- Scan the QR Code or visit the Offline License Management page using the link below:
- <https://alpha-account.ulinkda.com...>



- Log in on the Offline License Management page if you haven't already.

Copyright © ULINK Technology, Inc.

- c. Complete the license activation process by uploading the license .xml file to DA SmartQuest. Your DA SmartQuest Standalone application should now be set and running.